

Clutch tips

- Use OEM clutch plates in your clutch for the best performance.
- Soak your clutch plates before you install them.
- We recommend using a petroleum based oil
- Change the oil after each time you ride.
- Always maintain 1/8" to 1/4" of freeplay at the lever and perch.

Other parts available for this model

- H338 Inner Hub/Pressure Plate kit
- HC330 Complete Clutch Kit (standard inner hub/pressure plate)
- HB330 Complete Clutch Kit (slipper clutch)
- BTL230 Slipper Clutch
- FSC230 Fiber, Steel and Spring Kit
- C330 Clutch cover
- FP230 Fiber Clutch Plates
- SP232 Steel Clutch Plates
- CS230 Spring Kit

Warranty information

All merchandise manufactured by Hinson Clutch Components is guaranteed against defects in material and workmanship for a period of six months from the original date of purchase. Use of Kevlar and carbon fiber clutch plates will cause excessive wear and will void your warranty. Hinson Clutch Components will not warranty any product that has been modified, or where the product became defective due to improper installation, improper use, or any other misuse of the product. Hinson Clutch Components shall not be liable for any other damages caused by any defects in the product, whether incidental, consequential or otherwise. You must return the warranty card to validate your warranty. If your product is defective we will, at our discretion, repair or replace the product after it is returned to Hinson Clutch Components for a warranty inspection. Any request for warranty assistance will require your original receipt or acceptable proof of purchase. Hinson Clutch Components liability is limited to the cost of repair or replacement of the product. All warranty items will be viewed and acted upon at the discretion of Hinson Clutch Components.

Important! Warranty registration

Products must be registered in order to be eligible for warranty. Please log onto www.hinsonracing.com to activate your warranty registration. You will need to make note of your serial number, the small 8 digit number 180 degrees from Hinson Clutch Components on your part, as you cannot register your product without it.

THANK-YOU FOR BUYING HINSON CLUTCH COMPONENTS



Complete Billetproof Conventional Clutch Kit Suzuki RM-Z450 / RMX450Z

Thank you for purchasing Hinson Clutch Components. Please enjoy the high level of factory performance we have included in this package. Looking through these instructions will ensure your machine is on the way to its highest level of performance.

HC330



1630 W. 11th St. Unit E, Upland, CA 91786

p 909.946.2942 | f 909.985.2301 | www.hinsonracing.com | @hinsonracing

1. Remove basket

- Remove the pressure plate and the inner hub
- Remove the basket from the bike

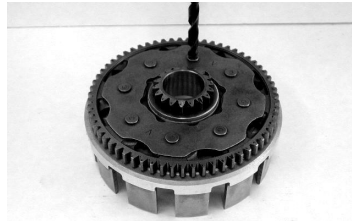


Figure 1

2. Remove gear

- Center punch the heads of the rivets on the backside of the basket and drill the head of the rivet off so the retainer plate can come off (Figure 1)
- Or you can grind the heads of the rivets off of the back of the basket to remove the retainer plate (Figure 2)
- Remove the primary drive gear/ kick-starter gear assembly and the stock cushions (Figure 3)
- You will use these on your new Hinson basket
- The stock basket and stock retainer plate will not be reused



Figure 2



Figure 3

3. Install primary drive gear

- Install the stock primary drive gear and the stock cushions onto your new Hinson Basket (Figure 4), you are able to use a lubricant such as WD-40 to get the gear to slide on easier



Figure 4



Figure 5

4. Install retainer plate

- Clean the threads in the holes of the basket and the threads on the screws with contact cleaner or another suitable cleaner.
- Apply Red Loctite* generously to the cleaned screws and to the threads on the basket (Figure 5 and 6)
- Install the new retainer plate with the new 10X24-5/8" screws and tighten them to 3.3 ft/lbs (Figure 7)
- Using a hammer and punch, peen the screws where they come through the inside of the basket (Figure 8)

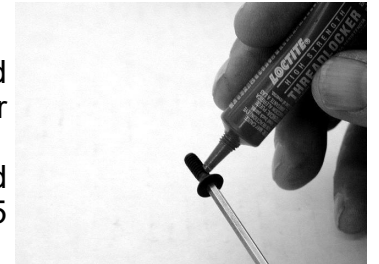


Figure 6



Figure 7



Figure 8

5. Re-install basket into bike

- Re-install the basket and the thrust washer
- Re-install your new Hinson inner hub and tighten the main shaft nut to manufacturers specifications
- Remove clutch plates from packaging and soak in oil for 12 hours.
- Identify (2) plates with (1) black ear marked on the outside diameter. These will go in first and last.
- Install (1) of the black marked fiber plates
- Install (7) steel plates, alternating with (6) other fiber plates
- Install (1) black marked fiber plate
- Re-install your new Hinson pressure plate, springs, bolts, and your new Hinson clutch cover.

Crucial Inspection

If your clutch has a jutter spring and seat ring, located at the bottom of your clutch pack against the inner hub, these need to be removed

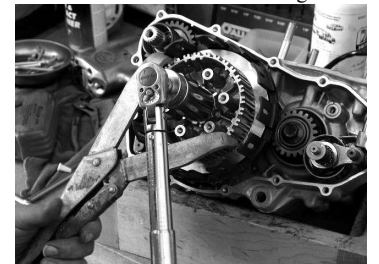


Figure 9

LOCTITE * It is crucial that you use RED Loctite #272. To insure proper bonding of the surfaces you need to clean the threads thoroughly with a contact cleaner, acetone, or another cleaning/degreasing solution. To make the bond even stronger you should use a Loctite primer. It is important that you use fresh Loctite since it has a shelf life. To ensure a permanent hold you need to put Loctite into the hole and also onto the screw. Keep in mind that you cannot use too much, you want complete coverage with the Loc-