



Complete Billetproof Conventional Clutch Kit Honda CRF250R/RX

Thank you for purchasing Hinson Clutch Components. Please enjoy the high level of factory performance we have included in this package. Looking through these instructions will ensure your machine is on the way to its highest level of performance.

HC894-2201



1630 W. 11th St. Unit E, Upland, CA 91786
p 909.946.2942 | f 909.985.2301 | www.hinsonracing.com

1.Remove basket

- Remove the pressure plate and remove the bearing, being sure to pay attention to the direction it is installed.
- Remove inner hub.
- Remove the basket from the bike.



Figure 1

2. Remove gear

- Center punch the heads of the rivets on the backside of the basket and drill the head of the rivet off so the retainer plate can come off (Figure 1)
- Or you can grind the heads of the rivets off of the back of the basket to remove the retainer plate (Figure 2)
- Remove the primary drive gear/ kick-starter gear (Figure 3)
- You will use this on your new Hinson basket
- The stock basket, cushions, retainer plate and diaphragm spring under the backing plate will not be reused.



Figure 2



Figure 3

3. Install primary drive gear

- Install you new Hinson cushions and the stock primary drive gear. onto your new Hinson Basket. You are able to use a lubricant such as WD-40 to get the gear to slide on easier.



Figure 4

4. Install retainer plate

- Clean the threads in the holes of the basket and the threads on the screws with contact cleaner or another suitable cleaner.
- Apply Red Loctite* generously to the cleaned screws and to the threads on the basket (Figure 4 and 5)
- Install the new retainer plate with the new 10X24-5/8" screws and tighten them to 40in/lbs (Figure 6)
- Using a hammer and punch, peen the screws where they come through the inside of the basket (Figure 7)



Figure 5



Figure 6

5. Re-install basket into bike

- Re-install the basket and the thrust washer.
- Re-install the inner hub and tighten the main shaft nut to manufacturers specifications. (Figure 8)
- Re-install the clutch plates.
- Re-install the Hinson pressure plate springs and bolts.
- Reinstall the clutch cover being sure to install the OEM O-ring into the Hinson cover.



Figure 7

Crucial Inspection

If your clutch has a jutter spring and seat ring, located at the bottom of your clutch pack against the inner hub, these need to be removed

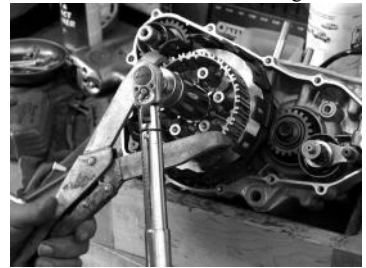


Figure 8

LOCTITE

* It is crucial that you use RED Loctite #272. To insure proper bonding of the surfaces you need to clean the threads thoroughly with a contact cleaner, acetone, or another cleaning/degreasing solution. To make the bond even stronger you should use a Loctite primer. It is important that you use fresh Loctite since it has a shelf life. To ensure a permanent hold you need to put Loctite into the hole and also onto the screw. Keep in mind that you cannot use too much, you want complete coverage with the Loctite.

Clutch tips

- Soak your clutch plates before you install them.
- We recommend using a petroleum based oil
- Change the oil after each time you ride.
- Always maintain 1/8" to 1/4" of free play at the lever and perch.

Visit HinsonRacing.com for all other parts available for this model.

Warranty information

All merchandise manufactured by Hinson Clutch Components is guaranteed against defects in material and workmanship for a period of six months from the original date of purchase. Use of Kevlar and carbon fiber clutch plates will cause excessive wear and will void your warranty. Hinson Clutch Components will not warranty any product that has been modified, or where the product became defective due to improper installation, improper use, or any other misuse of the product. Hinson Clutch Components shall not be liable for any other damages caused by any defects in the product, whether incidental, consequential or otherwise. If your product is defective we will, at our discretion, repair or replace the product after it is returned to Hinson Clutch Components for a warranty inspection. Any request for warranty assistance will require your original receipt or acceptable proof of purchase. Hinson Clutch Components liability is limited to the cost of repair or replacement of the product. All warranty items will be viewed and acted upon at the discretion of Hinson Clutch Components

THANK-YOU FOR BUYING A HINSON CLUTCH COMPONENT!