



1630 W 11th ST, UNIT E, UPLAND, CA 91786
909.946.2942, 909.985.2301 FAX
www.hinsonracing.com

SP663-7-2101

Congratulations, you have just purchased the finest steel plates available.

Instructions:

1. Drain the engine oil
2. Remove cover, spring bolts & spring washer buckets, spring plate, spring and pressure plate.
3. Remove used steel plates and fibers.
4. There is one thicker steel plate that will be installed first
5. Install your first fiber plate then the thick Hinson steel plate alternating fiber steel fiber steel with the rest of your Hinson steel plates ending with a fiber
6. Reinstall pressure plate, spring and all the stock hardware being sure to keep the spring centered and tighten bolts to manufacturer's specification.
7. Reinstall clutch cover.
8. Refill engine oil.

Visit HinsonRacing.com for more products available for this model.

For the best performance and life from your clutch pack, we recommend you use Hinson clutch basket, inner hub, pressure plate, clutch cover, a petroleum based 10w-40 Racing engine Oil , and that you change your oil after each time you ride.

Thank you for purchasing a Hinson Clutch Components product. If you have any questions or need technical assistance, please call us at (909) 946-2942 or check us out at www.hinsonracing.com

Thank you very much for purchasing a Hinson Clutch Component!