

Clutch tips

- Use Hinson clutch plates in your clutch for the best performance.
- Soak your clutch plates before you install them.
- We recommend using petroleum based 80 weight Transmission oil
- Change the oil after each time you ride.
- Always maintain 1/8" to 1/4" of freeplay at the lever and perch.

Other parts available for this model

- FP094-8 Fiber Clutch Plates
- SP129-7 Steel Clutch Plates
- HC494 Complete Clutch Kit (Standard Inner Hub/Pressure plate)

VISIT HINSONRACING.COM FOR EVEN MORE PRODUCTS

Warranty information

All merchandise manufactured by Hinson Clutch Components is guaranteed against defects in material and workmanship for a period of six months from the original date of purchase. Use of Kevlar and carbon fiber clutch plates will cause excessive wear and will void your warranty. Hinson Clutch Components will not warranty any product that has been modified, or where the product became defective due to improper installation, improper use, or any other misuse of the product. Hinson Clutch Components shall not be liable for any other damages caused by any defects in the product, whether incidental, consequential or otherwise. You must return the warranty card to validate your warranty. If your product is defective we will, at our discretion, repair or replace the product after it is returned to Hinson Clutch Components for a warranty inspection. Any request for warranty assistance will require your original receipt or acceptable proof of purchase. Hinson Clutch Components liability is limited to the cost of repair or replacement of the product. All warranty items will be viewed and acted upon at the discretion of Hinson Clutch Components

Important! Warranty registration

Products must be registered in order to be eligible for warranty. Please log onto www.hinsonracing.com to activate your warranty registration. You will need to make note of your serial number, the small 8 digit number 180 degrees from Hinson Clutch Components on your part, as you cannot register your product without it.

THANK-YOU FOR BUYING A HINSON CLUTCH COMPONENT



2010-2015 CRF250F HINSON COMPLETE CLUTCH WITH SLIPPER CLUTCH



1. Remove basket

- Remove the clutch springs and bolts, pressure plate stock clutch plates, and the inner hub (these will not be re-used in the install)
- Remove the basket from the bike

2. Remove gear

- Center punch the heads of the rivets on the backside of the basket and drill the head of the rivet off so the retainer plate can come off (Figure 1)
- Or you can grind the heads of the rivets off of the back of the basket to remove the retainer plate (Figure 2)
- Remove the primary drive gear and the stock cushions (Figure 3)
- The stock basket, stock kickstarter gear, and stock retainer plate and stock cushions will not be reused, the Hinson Basket comes with the kickstarter gear already installed

3. Install primary drive gear

- Install the stock primary drive gear and your new Hinson cushions onto your new Hinson Basket with the recessed side of the gear facing up (Figure 4), you are able to use a lubricant such as WD-40 to get the gear to slide on easier

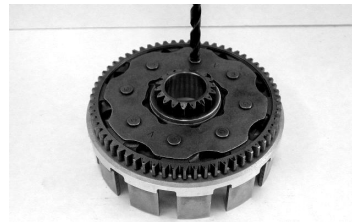


Figure 1



Figure 2

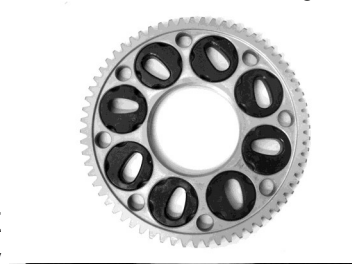


Figure 3



Figure 4



Figure 5

4. . Install retainer plate

- Clean the threads in the holes of the basket and the threads on the screws with contact cleaner or another suitable cleaner.
- Apply Red Loctite* generously to the cleaned screws and to the threads on the basket (Figure 5 and 6)
- Install the new retainer plate with the new 10X24-1/2" screws and tighten them to 3.3 ft/lbs (Figure 7)
- Using a hammer and punch, peen the screws where they come through the inside of the basket (Figure 8)

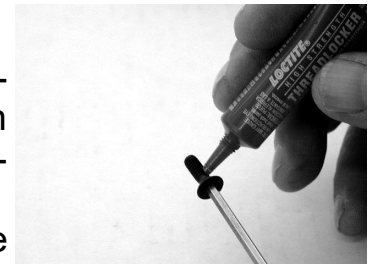


Figure 6



Figure 7



Figure 8

5. Re-install basket into bike

- Re-install the basket and the thrust washer
- Install your new Hinson BTL using following the BTL instructions provided
- Use mainshaft nut provided and torque to manufactures specification (figure9)
- Re-install the Hinson clutch plates, the BTL pressure plate and 6 pressure plate bolts tightening in a star pattern to 6ft/lbs

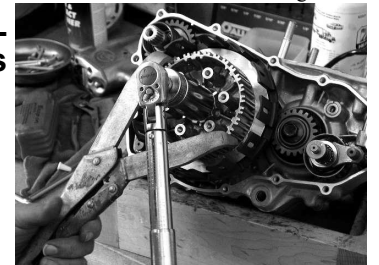


Figure 9

LOCTITE * It is crucial that you use RED Loctite #272. To insure proper bonding of the surfaces you need to clean the threads thoroughly with a contact cleaner, acetone, or another cleaning/degreasing solution. To make the bond even stronger you should use a Loctite primer. It is important that you use fresh Loctite since it has a shelf life. To ensure a permanent hold you need to put Loctite into the hole and also onto the screw. Keep in mind that you cannot use too much, you want complete coverage with the Loc-